

1/11

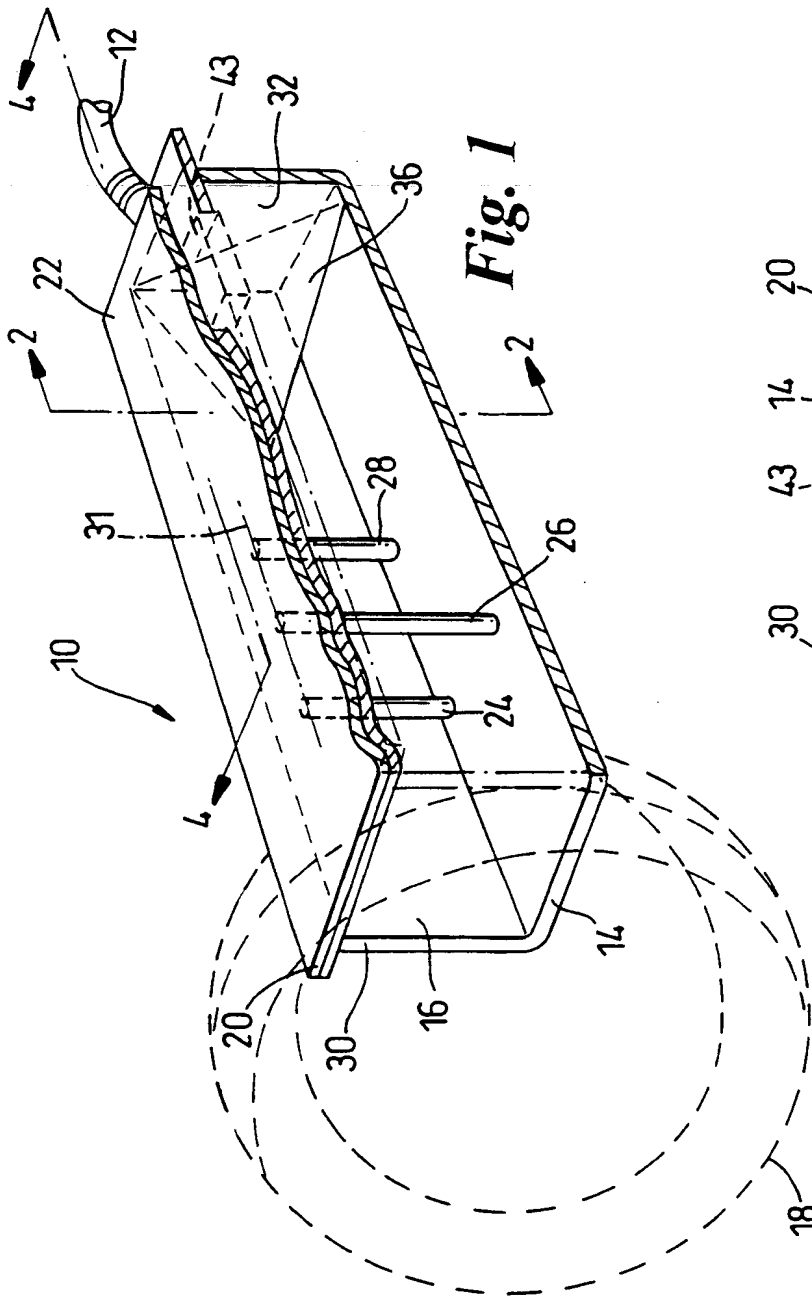


Fig. 1

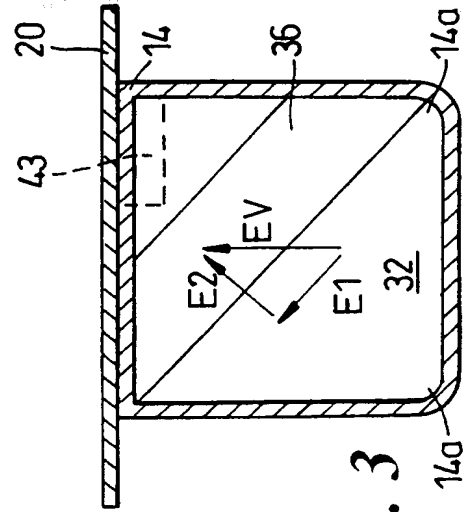


Fig. 3

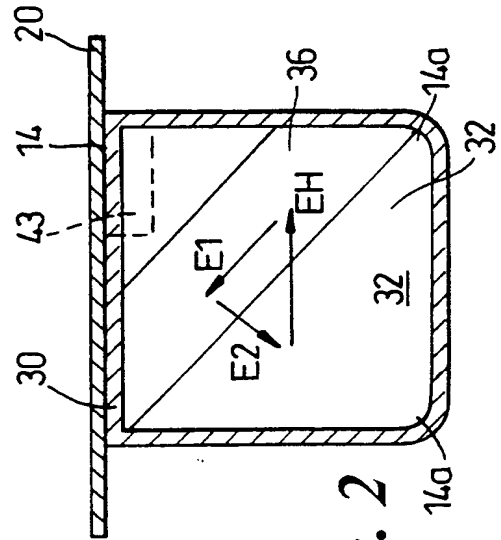


Fig. 2

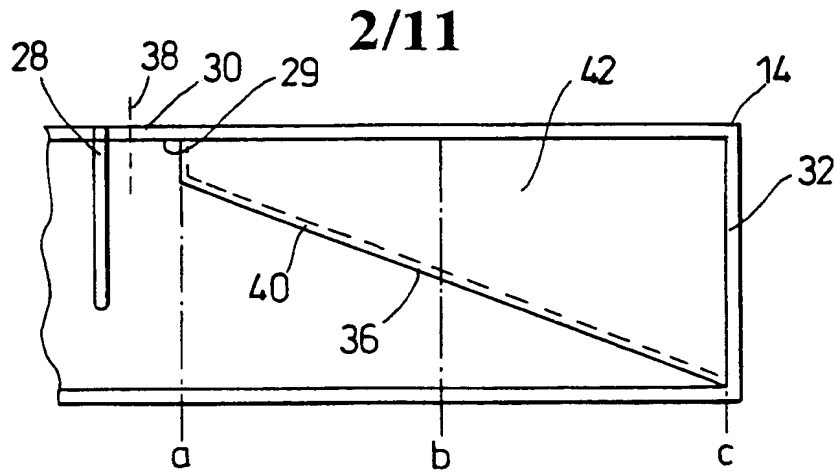


Fig. 4

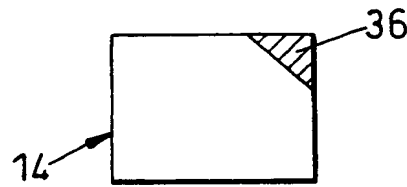


Fig. 5a

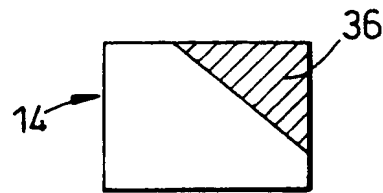


Fig. 5b

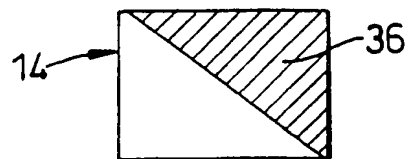


Fig. 5c

3/11

PHASE OF WEDGEPLATE

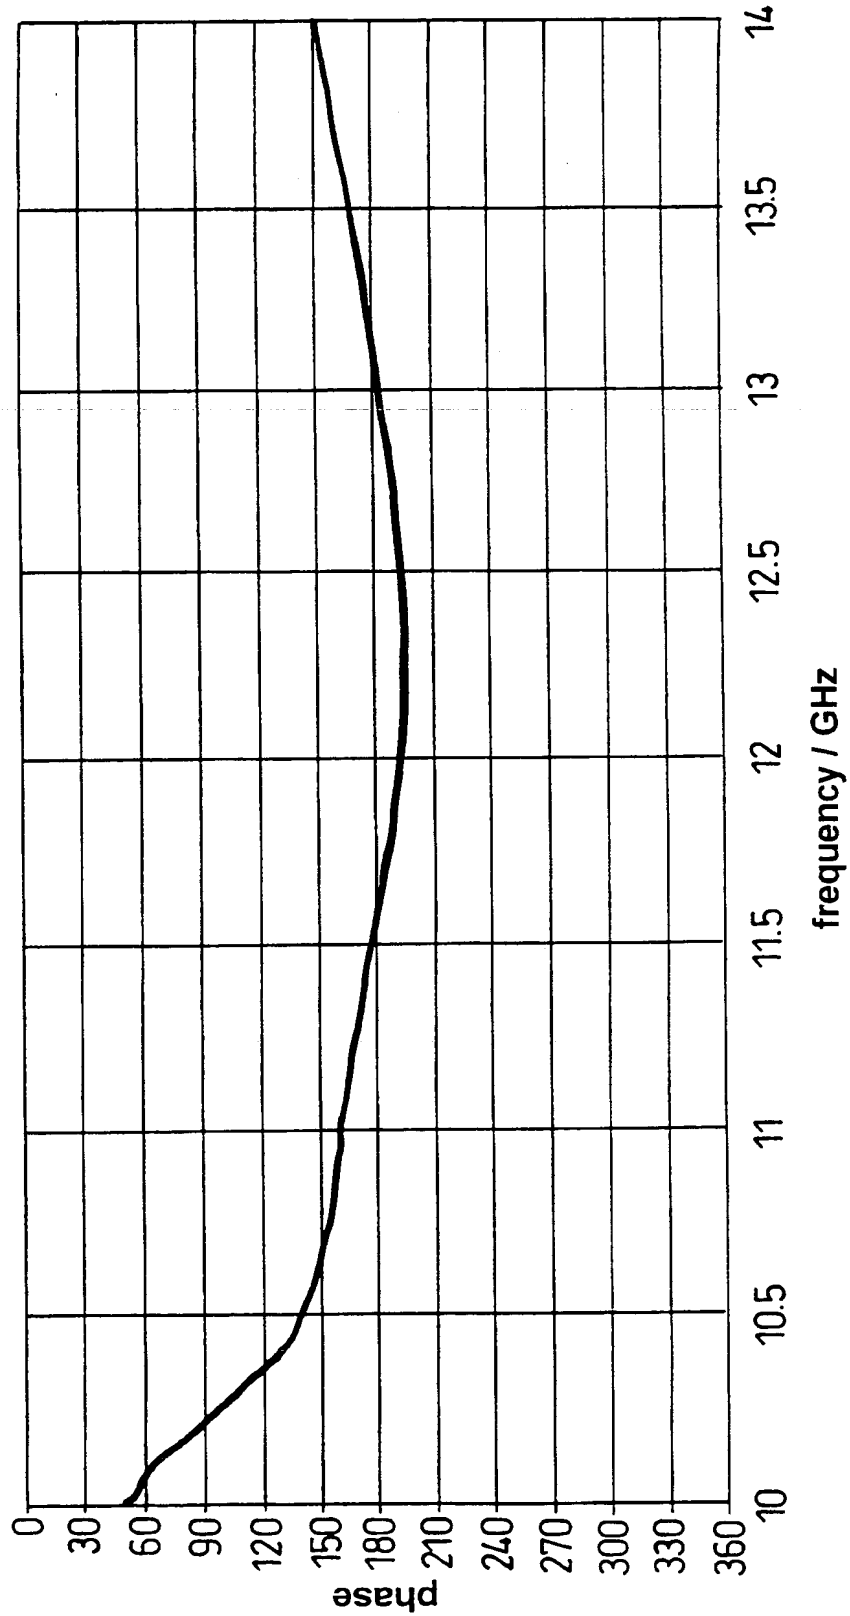


Fig. 6

4/11

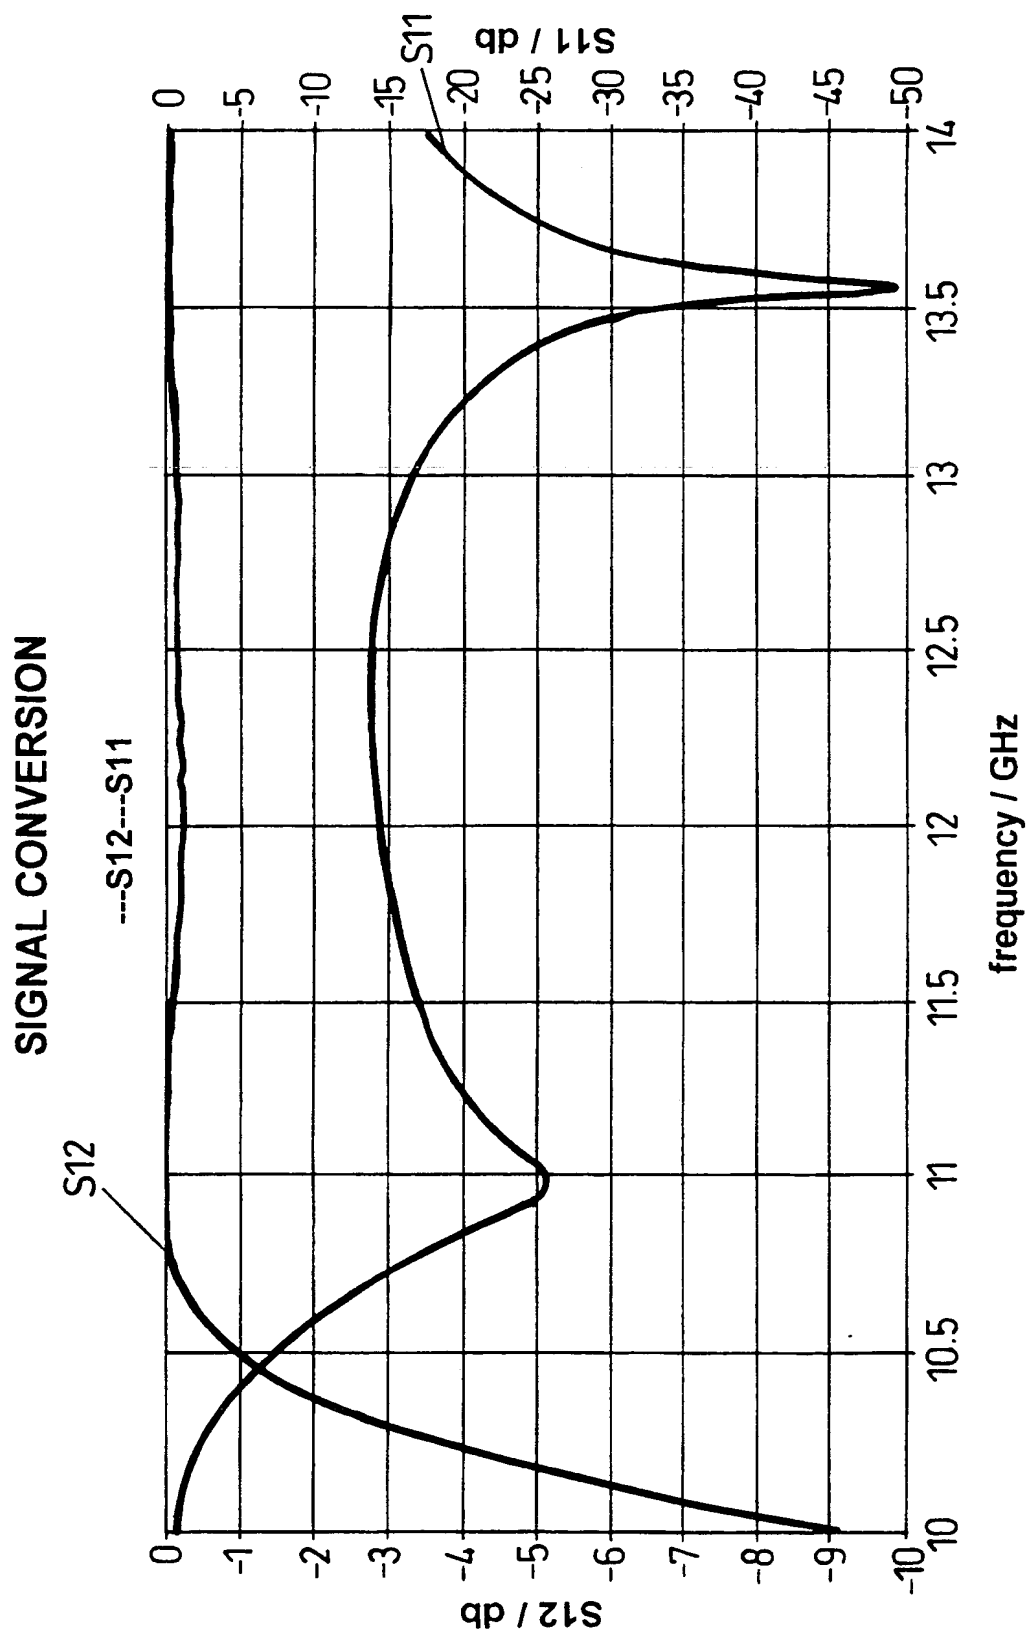


Fig. 7

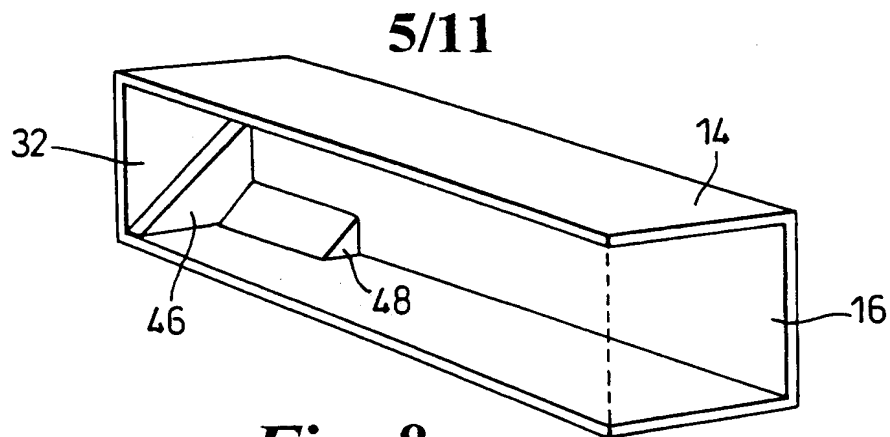


Fig. 8

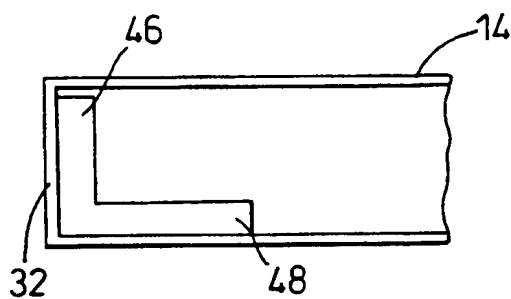


Fig. 9

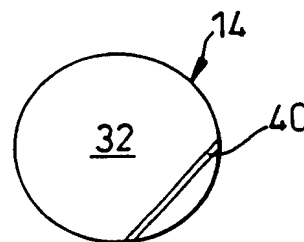


Fig. 13a

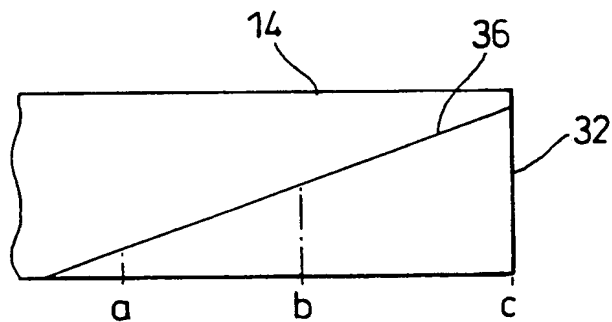


Fig. 12

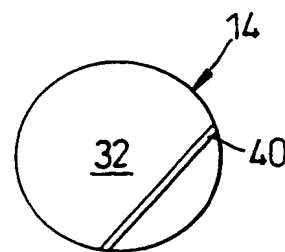


Fig. 13b

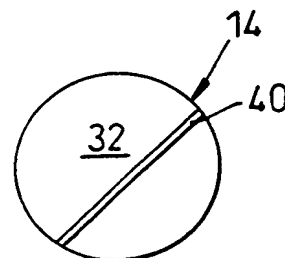


Fig. 13c

6/11

PHASE OF STEPPED WEDGE

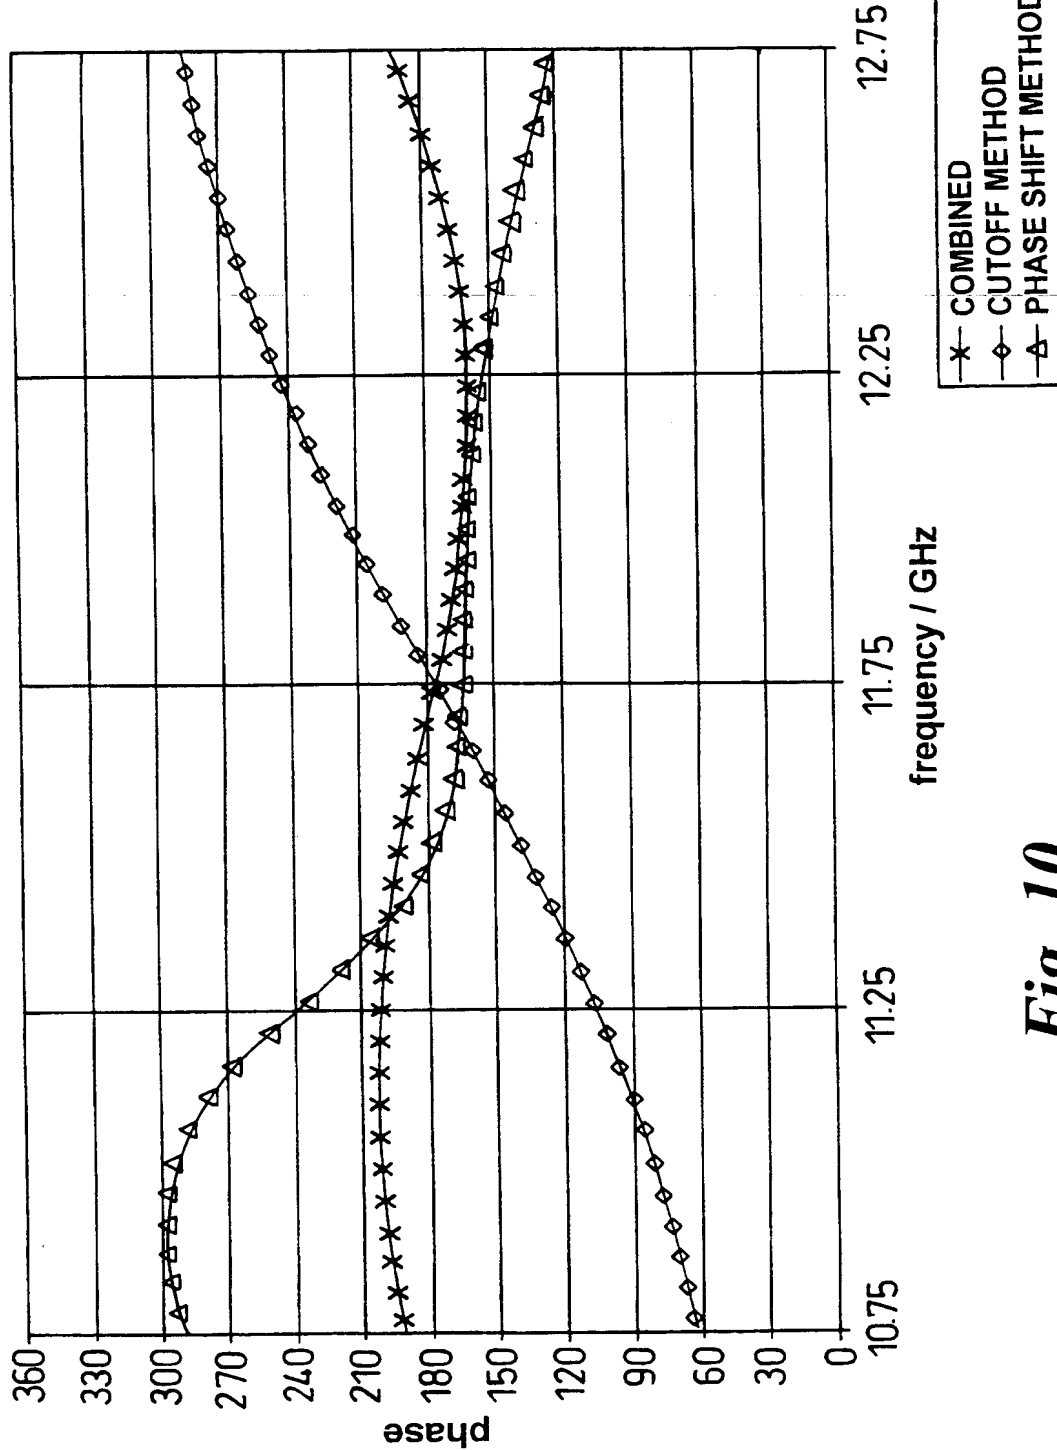


Fig. 10

7/11

SIGNAL CONVERSION

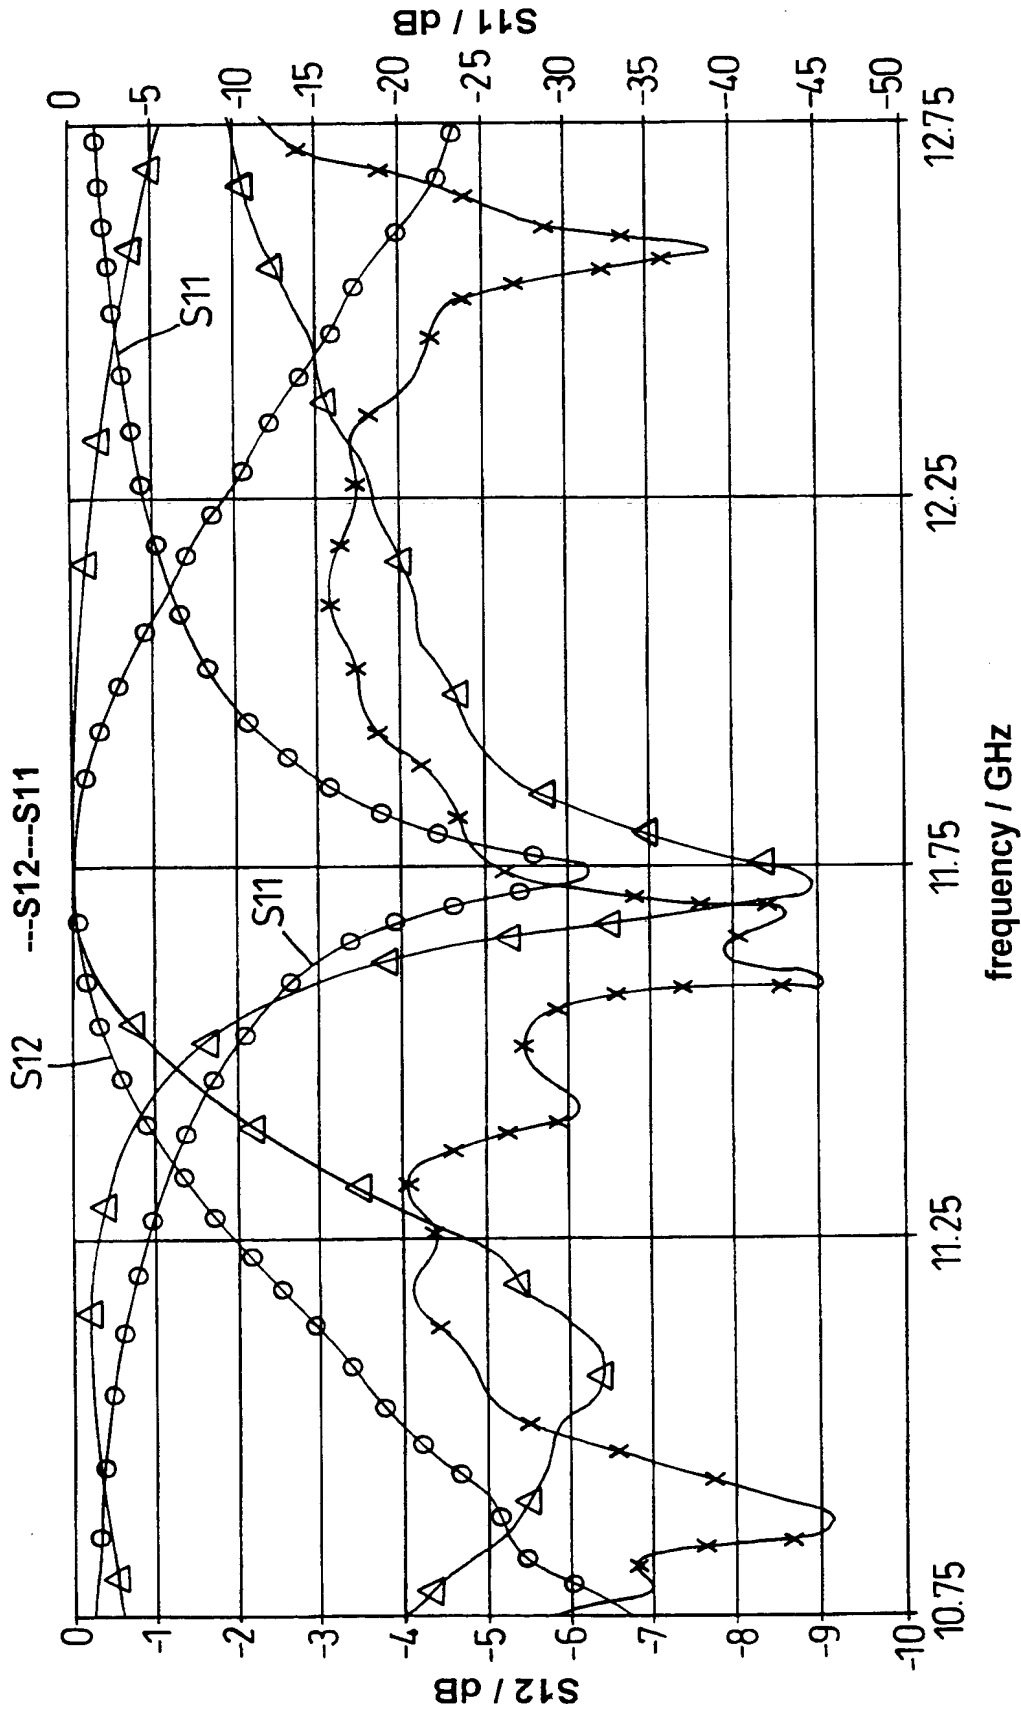


Fig. 11

8/11

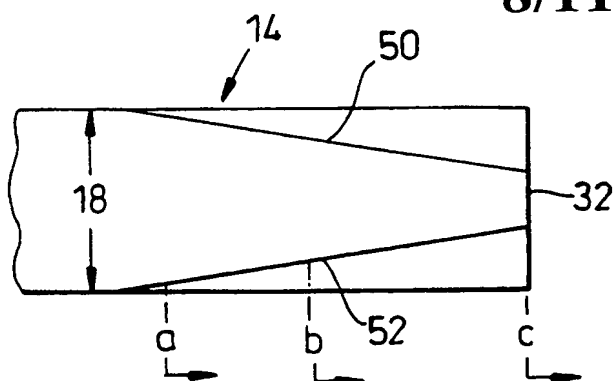


Fig. 14

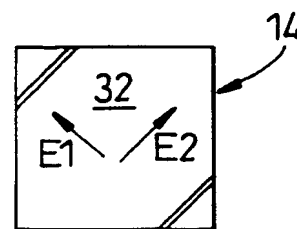


Fig. 15a

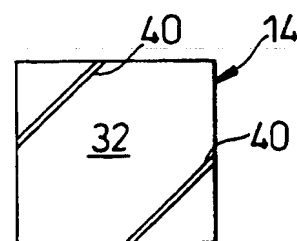


Fig. 15b

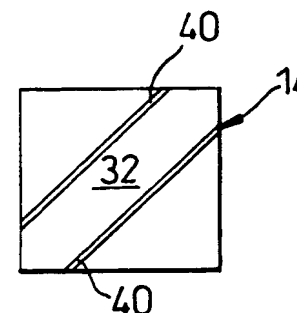


Fig. 15c

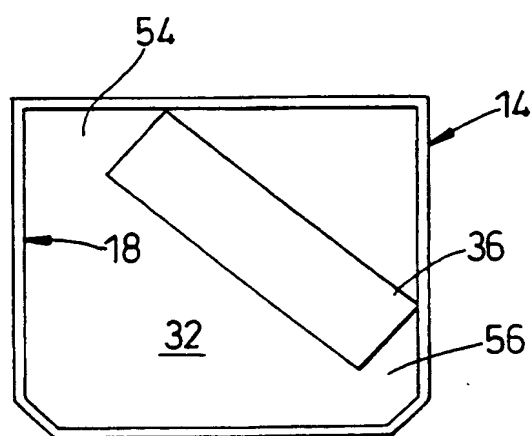


Fig. 16

9/11

PHASE OF WEDGEPLATE


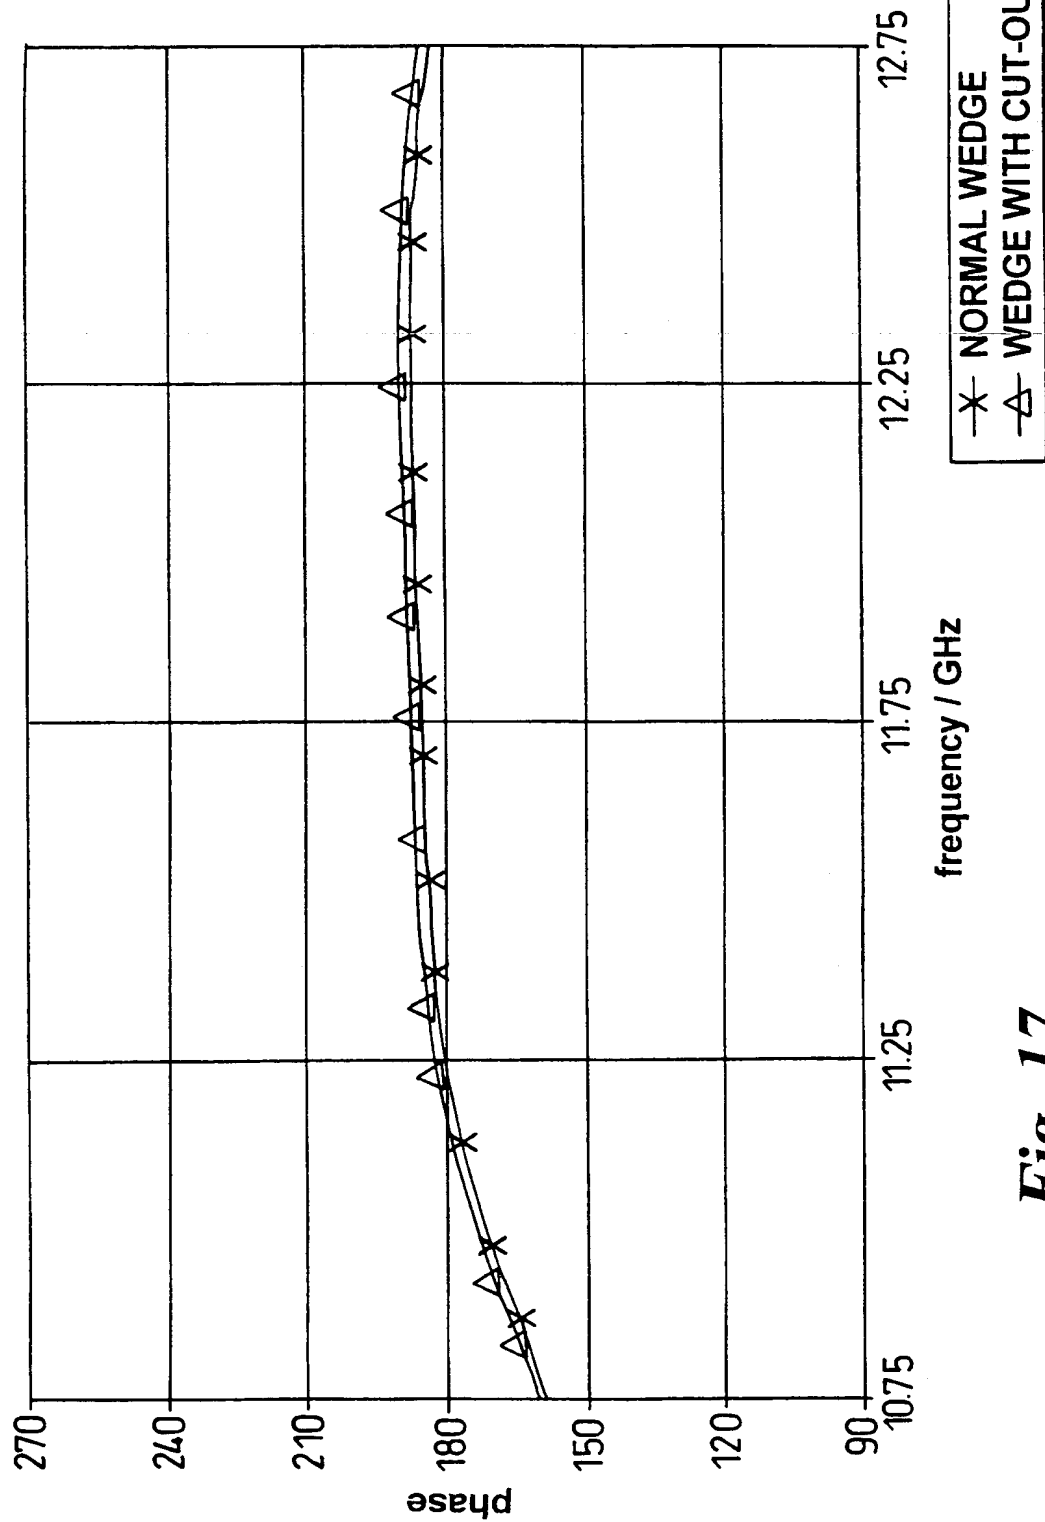


Fig. 17

10/11

SIGNAL CONVERSION

---S12---S11

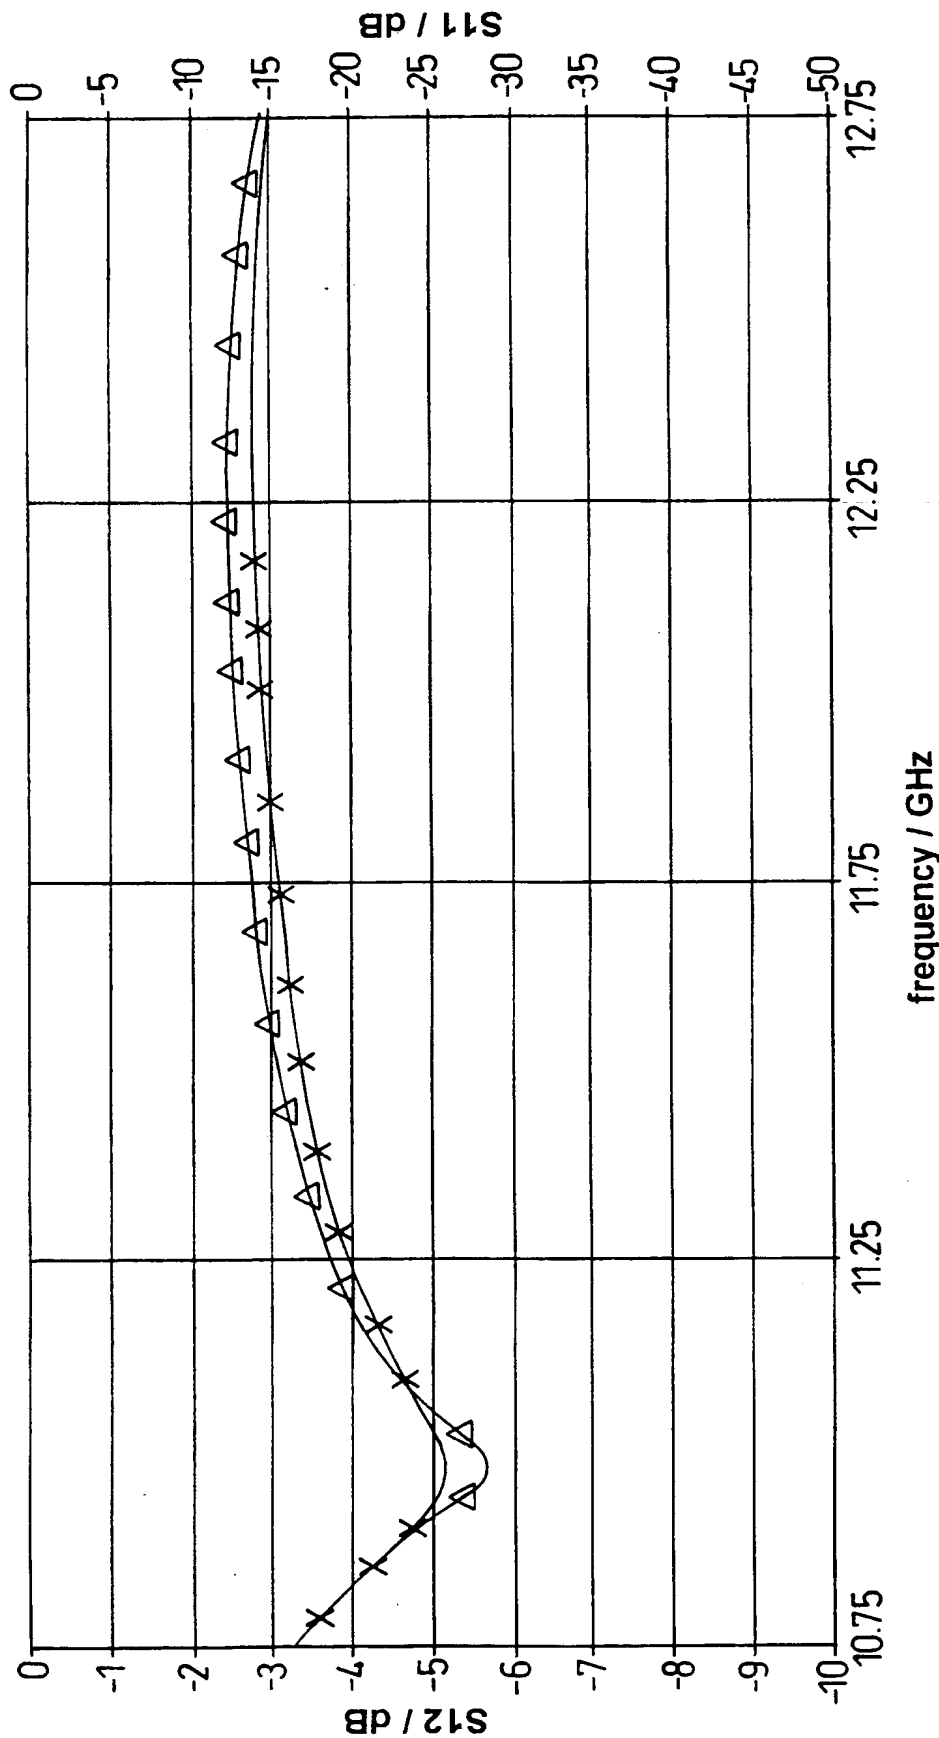

X NORMAL WEDGE
-△- WEDGE WITH CUT-OUTS

Fig. 18

11/11

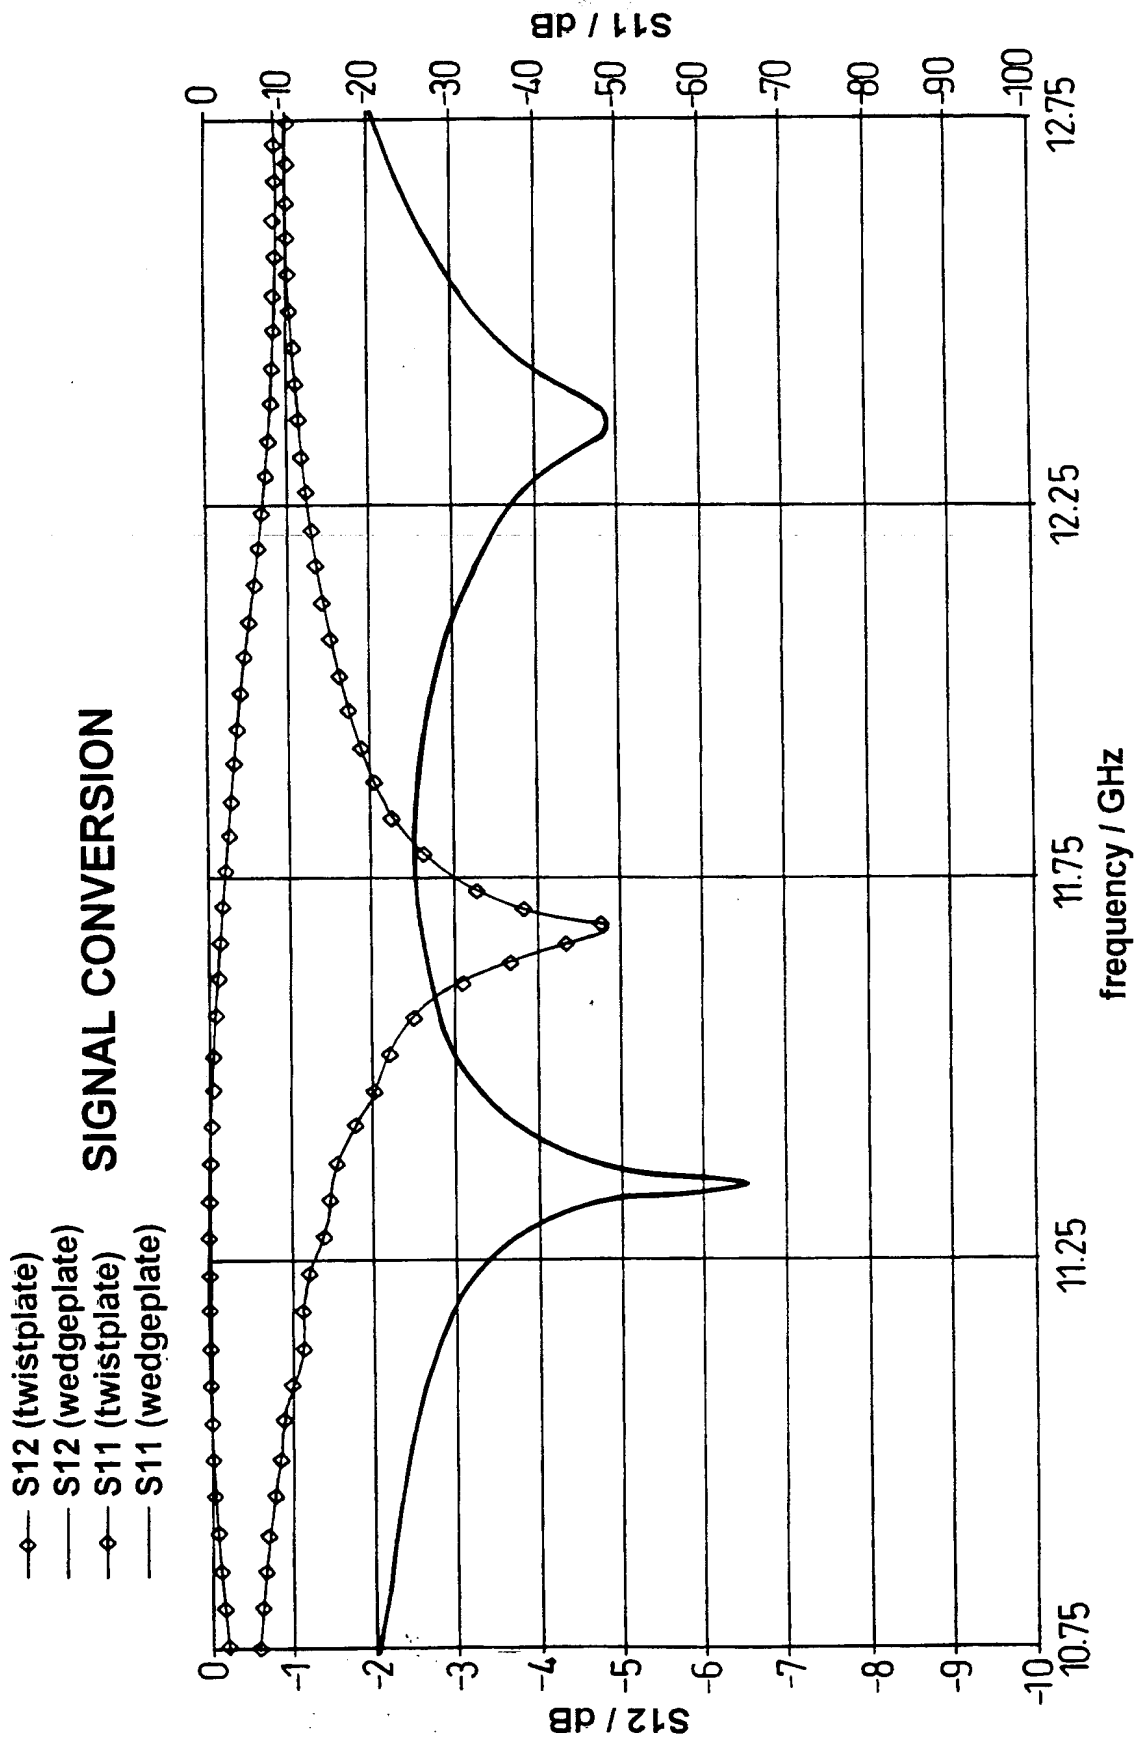


Fig. 19